



BUNDLE SOFA. SOFA

DESIGN: EOOS.

Construction

- frame: steel construction with zigzag springs
- back: wooden construction

Base

die-cast aluminium

Upholstery

- back: ticking sewn into chambers with down filling and cold cure foam
- notice: Ticking chambers may be visible and are a sign of product's quality.
- seat cushions: cold cure foam sandwich construction with a layer of wadding on top

Armrests

cold cure foam with a layer of wadding on top

Ordering notes

All modules can be freestanding except for corner récamière modules and corner sofa modules.

The product range offers a variety of layout options. All the elements in the product range can be used for this. At least two modules have to be selected. All modules can be used as sectional units.

Please select modules from left to right for your configuration. In case if more than two modules are selected, please add a drawing to your purchase order.


frame

- powder-coated black matt
- powder-coated bronze matt

glides


- felt glides
- stoppers

free-standing sofa

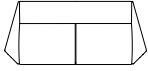

630-25
 W 215 D 99 H 78
 SH 43 SD 58


W 84¾ D 39 H 30¾
 SH 17 SD 22¾

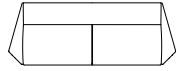

630-30
 W 255 D 99 H 78
 SH 43 SD 58


W 100½ D 39 H 30¾
 SH 17 SD 22¾

corner sofa




630-25 ESA
 W 226 D 99 H 78
 SH 43 SD 58

W 89 D 39 H 30¾
 SH 17 SD 22¾



630-30 ESA
 W 266 D 99 H 78
 SH 43 SD 58

W 104¾ D 39 H 30¾
 SH 17 SD 22¾



630-25 ER
 W 200 D 99 H 78
 SH 43 SD 58


W 78¾ D 39 H 30¾
 SH 17 SD 22¾



630-30 ER
 W 240 D 99 H 78
 SH 43 SD 58


W 94½ D 39 H 30¾
 SH 17 SD 22¾

corner récamière

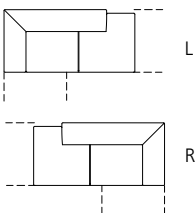

630-25 ER
 W 200 D 99 H 78
 SH 43 SD 58


W 78¾ D 39 H 30¾
 SH 17 SD 22¾

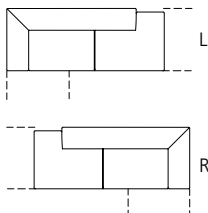

630-30 ER
 W 240 D 99 H 78
 SH 43 SD 58


W 94½ D 39 H 30¾
 SH 17 SD 22¾

extension sofa

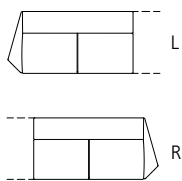


630-25 ALB
W 189 D 99 H 78
SH 43 SD 58

W 74½ D 39 H 30¾
SH 17 SD 22¾

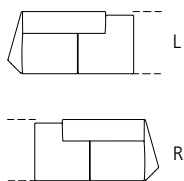


630-25 ASB
W 189 D 99 H 78
SH 43 SD 58

W 74½ D 39 H 30¾
SH 17 SD 22¾

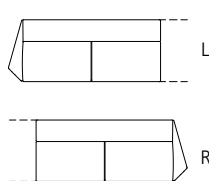

630-30 ALB
W 229 D 99 H 78
SH 43 SD 58


W 90¼ D 39 H 30¾
SH 17 SD 22¾

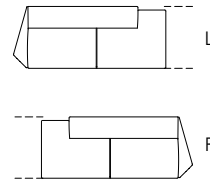

630-30 ASB
W 229 D 99 H 78
SH 43 SD 58


W 90¼ D 39 H 30¾
SH 17 SD 22¾

extension récamière

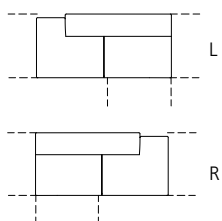


630-25 R
W 181 D 99 H 78
SH 43 SD 58

W 71¼ D 39 H 30¾
SH 17 SD 22¾

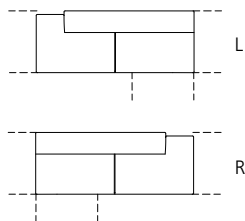


630-30 R
W 221 D 99 H 78
SH 43 SD 58

W 87 D 39 H 30¾
SH 17 SD 22¾

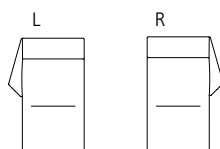

630-10 ARA
W 118 D 175 H 78
SH 43 SD 137


W 46½ D 69 H 30¾
SH 17 SD 54

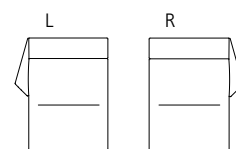

630-15 ARA
W 145 D 175 H 78
SH 43 SD 137


W 57 D 69 H 30¾
SH 17 SD 54

configuration example

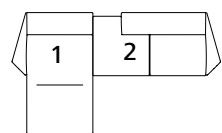


630-Version A
W 306 D 175 H 78
SH 43

W 120½ D 69 H 30¾
SH 17

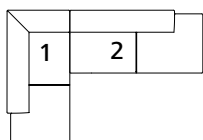

630-Version B
W 280 D 200 H 78
SH 43

W 110¼ D 78¾ H 30¾
SH 17

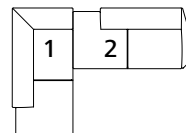


630-Version C
W 288 D 200 H 78
SH 43

W 113½ D 78¾ H 30¾
SH 17

Residential only


BUNDLE SOFA

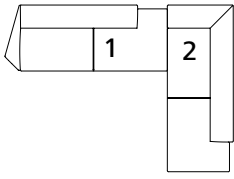

630-Version D

W 328 D 240 H 78
SH 43


W 129¼ D 94½ H 30¾
SH 17

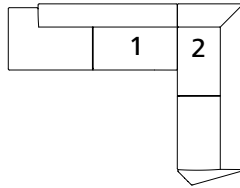

630-Version E

W 320 D 266 H 78
SH 43

W 126 D 104¾ H 30¾
SH 17

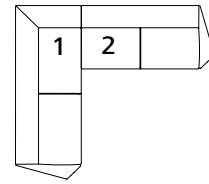

630-Version F

W 288 D 266 H 78
SH 43









W 113½ D 104¾ H 30¾
SH 17

Additional ordering notes for corner sofa modules

1. Firstly, choose a corner sofa module or a corner récamière module (corner backrest).

Corner sofa modules

Corner récamière modules



630-25 ESAR






630-30 ESAR

630-25 ERL

630-30 ERL

2. Then choose an extension sofa module.

Extension sofas

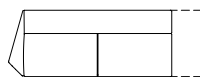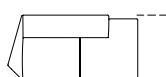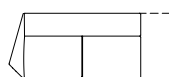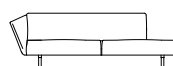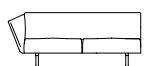





630-25 ALBL

630-25 ASBL

630-30 ALBL

630-30 ASBL

Extension récamières

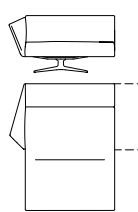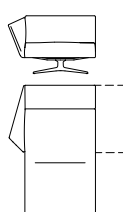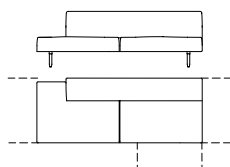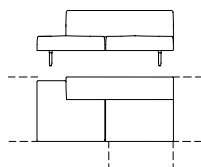

630-25 RL

630-30 RL

630-10 ARAL

630-15 ARAL


Configuration example

Available backrests


(optional layout, consisting of 630-25 ERR and 630-25 RR)

630-25 ERR


630-25 RR

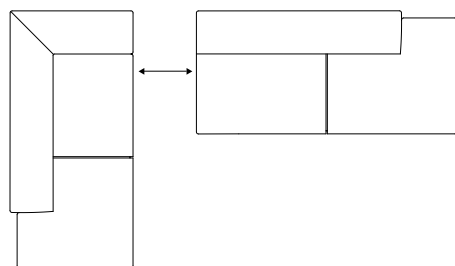


The modules are equipped with either short or long back.




The backrest is open when choosing an element with **short back**.

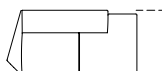

630-25 ASBL **SB = short back**

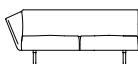

The backrest is partly closed when choosing an element with **long back**.

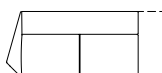

630-25 ALBL **LB = long back**